

# SINGLE-DECK MERCHANDISER INSTALLATION & OPERATIONS MANUAL

# S2SG-R DELI/MEAT/SEAFOOD

Table of C	contents
Technical Reference2-4	Pre-Power Checklist12
General Information5	Airflow & Defrost13
Installation6-8	Case Cleaning14-15
Case Connections9	Parts Ordering16
Lighting & Power Supplies10-11	Appendices

To ensure proper functionality and optimum performance, it is STRONGLY recommended that Hillphoenix specialty cases be installed/serviced by qualified technicians who have experience working with commercial refrigerated display merchandisers and storage cabinets. For a list of Hillphoenix-authorized installation/service contractors, please visit our website at www.hillphoenix.com.















# LIABILITY NOTICE

# For Cases with Shelf Lighting Systems

Hillphoenix does NOT design any of its shelf lighting systems or any of its display cases with shelf lighting systems for direct or indirect exposure to water or other liquids. The use of a misting system or water hose on a display case with a shelf lighting system, resulting in the direct or indirect exposure of the lighting system to water, can lead to a number of serious issues (including, without limitation, electrical failures, fire, electric shock, and mold) in turn resulting in personal injury, death, sickness, and/or serious property damage (including, without limitation, to the display itself, to the location where the display is situated [e.g., store] and to any surrounding property). DO NOT use misting systems, water hoses or other devices that spray liquids in Hillphoenix display cases with lighted shelves.

If a misting system or water hose is installed or used on a display case with a shelf lighting system, then Hillphoenix shall not be subject to any obligations or liabilities (whether arising out of breach of contract, warranty, tort [including negligence], strict liability or other theories of law) directly or indirectly resulting from, arising out of or related to such installation or use, including, without limitation, any personal injury, death or property damage resulting from an electrical failure, fire, electric shock, or mold.

P079211M, REVO

# R-744 (CO<sub>2</sub>) NOTICE

# For Systems Utilizing R-744 (CO<sub>2</sub>) Refrigerant

For refrigeration units that utilize R-744 ( $CO_2$ ), pressure relief and pressure-regulating relief valves may need to be installed based on the system capacity. The valves need to be located such that no stop valve is positioned between the relief valves and the parts or section of the system being protected.

When de-energizing refrigeration units containing R-744 ( $CO_2$ ), venting of the R-744 ( $CO_2$ ) refrigerant may occur through the pressure regulating relief valves. These valves are located on the refrigeration system and not on the case model. If venting does occur, the valve must not be defeated, capped, or altered by any means.

WARNING: Under no circumstances should any component be replaced or added without consulting Hillphoenix Field Service Engineering. Utilizing improper components may result in serious injury to persons or damage to the system.

# **Important**

At Hillphoenix<sup>®</sup>, the safety of our customers and employees, as well as the ongoing performance of our products, are top priorities. To that end, we include important warning messages in all Hillphoenix installation and operations handbooks, accompanied by an alert symbol paired with the word "DANGER", "WARNING", or "CAUTION".

All warning messages will inform you of the potential hazard; how to reduce the risk of case damage, personal injury or death; and what may happen if the instructions are not properly followed.

# A DANGER

Indicates an immediate threat of death or serious injury if all instructions are not followed carefully.

# **A** WARNING

Indicates a potential threat of death or serious injury if all instructions are not followed carefully.


# A CAUTION

Indicates that failure to properly follow instructions may result in case damage.

# **Revision History** • new manual format\_07/21

#### **GENERAL NOTES:**

• "---" Indicates that the feature is not an option on this case model and/or the data is not yet available at this time.

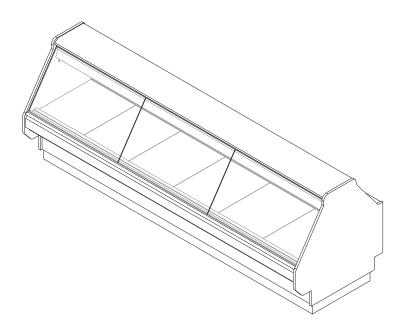

SHIPPING WEIG	GHT
Case	Weight
S2SG-RG	







ALL MEASUREMENTS ARE TAKEN PER ASHRAE-72-2005 SPECIFICATIONS, HILLPHOENIX REFRIGERATED DISPLAY CASES FOR SALE IN THE UNITED STATES MEET OR EXCEED DEPARTMENT OF ENERGY 2017 REQUIREMENTS.

# S2SG-R

Rev. Date	Rev.#	Rev. Title
07-09-21	2	APPLICATIONS
01-21-21	1	NEW STANDARDS



# S2SG-R

Service Single-Deck Merchandiser w/ Flat Lift Glass 4', 6', 8', 10' & 12' (Deli, Meat & Seafood)

ELECTRI	CAL DA	TA											
	Fans		fficiency ans		ndensate ans		ain aters			l Defrost iters			
Case	Per	120	Volts	120	Volts	120	Volts	208	Volts	240 Volts			
Length	Case	Amps	Watts	Amps	Watts	Amps	Watts	Amps	Watts	Amps	s Watts		
4'													
6'													
8'													
10'													
12'													

LIGHTING	G DATA											
			Clearvoyant 4 LED Lighting (Per Light Row)									
				d Power	High Power (Cornice)							
	Lights		`	or Shelf)	,							
Case	Per	Light	120	Volts	120	Volts						
Length	Row	Length	Amps	Watts	Amps	Watts						
4'	1	4'	0.05	5.9	0.12	14.9						
6'	2	3'	0.08	9.4	0.20	23.8						
8'	2	4'	0.10	11.8	0.24	29.8						
10'	2	5'	0.12	0.12 15.0		37.0						
12'	3	4'	0.15	17.7	0.36	44.7						

<b>GUIDELINES</b>	AND CON	TROL SETTINGS (D	X)					
BTUH	/ft	Superheat			Discharge Air			
		Set Point @ Bulb	Evaporator	Discharge Air	Velocity			
Conventional	Parallel	(°F)	(°F)	(°F)	(FPM)			
294	270	6 - 8	20					

DEFROS1	CONTRO	LS								
		Electri	ic Defrost	Timed-0	Off Defrost	Hot Gas Defrost				
	Run-Off		Termination		Termination		Termination			
Defrosts	Time	Fail-Safe	Temp	Fail-Safe	Temp	Fail-Safe	Temp			
Per Day	(Min)	(Min)	(°F)	(Min)	(°F)	(Min)	(°F)			
2	6 - 8			75	50					

#### NOTES:


- "---" Indicates that the feature is not an option on this case model and/or the data is not yet available at this time.
- Listed discharge air velocity represents the average velocity at the peak of defrost.
- Listed data is based on the factory recommended default fresh meat temperature settings.
- · Shelves are not recommended for fresh meat applications.









# S2SG-R





ALL MEASUREMENTS ARE TAKEN PER ASHRAE-72-2005 SPECIFICATIONS. HILLPHOENIX REFRIGERATED DISPLAY CASES FOR SALE IN THE UNITED STATES MEET OR EXCEED DEPARTMENT OF ENERGY 2017 REQUIREMENTS.

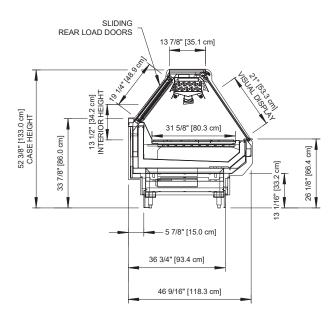

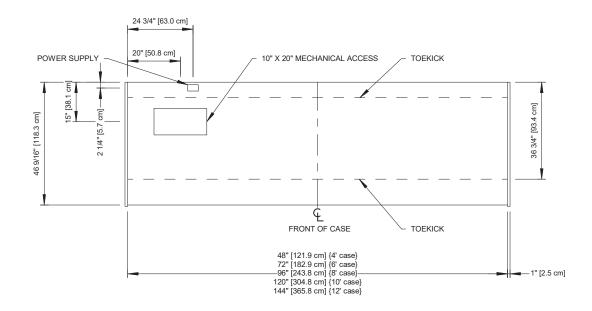







ALL MEASUREMENTS ARE TAKEN PER ASHRAE-72-2005 SPECIFICATIONS. HILLPHOENIX REFRIGERATED DISPLAY CASES FOR SALE IN THE UNITED STATES MEET OR EXCEED DEPARTMENT OF ENERGY 2017 REQUIREMENTS.

#### S2SG-R

Rev. Date	Rev.#	Rev. Title
07-09-21	2	APPLICATIONS
01-21-21	1	NEW STANDARDS



Thank you for choosing Hillphoenix for your food merchandising needs. This handbook contains important technical information and will assist you with the installation and operation of your new Hillphoenix specialty cases. By closely following the instructions, you can expect peak performance; attractive fit and finish; and long case life.

We are always interested in your suggestions for improvements (e.g. case design, technical documents, etc.). Please feel free to contact our Marketing Services group at the number listed below. Thank you for choosing Hillphoenix, and we wish you the very best in outstanding food merchandising.

#### **CASE DESCRIPTION**

This manual specifically covers the S2SG-R deli, meat and seafood application, service single-deck merchandiser with flat lift glass.

#### **STORE CONDITIONS**

Hillphoenix cases are designed to operate in an air-conditioned store that maintains a  $75\,^{\circ}$  F ( $24\,^{\circ}$ C) store temperature and 55% (max) relative humidity (ASHRAE conditions). Case operation will be adversely affected by exposure to excessively high ambient temperatures and/or humidity.

#### REFRIGERATION SYSTEM OPERATION

Air-cooled condensing units require adequate ventilation for efficient performance. Machine-room temperatures must be maintained at a minimum of 65°F in winter and a maximum of 95°F in summer. Minimum condensing temperatures should be no less than 70°F.

#### SHIPPING CASES

Transportation companies assume all liability from the time a shipment is received by them until the time it is delivered to the consumer. Our liability ceases at the time of shipment.

#### **RECEIVING CASES**

Examine fixtures carefully and in the event of shipping damage and/or shortages, please contact the Service Parts Department at the number listed below.

### **CASE DAMAGE**

Claims for obvious damage must be 1) noted on either the freight bill or the express receipt and 2) signed by the carrier's agent; otherwise, the carrier may refuse the claim. If damage

becomes apparent after the equipment is unpacked, retain all packing materials and submit a written request to the carrier for inspection within 14 days of receipt of the equipment.

Failure to follow this procedure will result in refusal by the carrier to honor any claims with a consequent loss to the consumer.

If a UPS shipment has been damaged, retain the damaged material, the carton and notify us at once. We will file a claim.

#### **LOST/MISSING ITEMS**

Equipment has been carefully inspected to insure the highest level of quality. Any claim for lost/missing items must be made to Hillphoenix within 48 hours of receipt of the equipment. When making a claim please use the number listed below.

#### **SERVICE & TECHNICAL SUPPORT**

For service or technical questions regarding specialty cases, please contact our Specialty Products Division Service Department at 1-319-293-3777. For questions regarding our refrigeration systems or electrical distribution centers, please contact our Systems Division Customer Service Department at 1-770-388-0706.

#### **CONTACTING THE FACTORY**

If you need to contact Hillphoenix regarding a specific fixture, be certain that you have both the case model number and serial number (this information can be found on the data tag, located on the top-left interior of the case). When you have this information, call the number below and ask for a Service Parts Representative.

Hillphoenix Specialty Products
703 Franklin Street, PO Box 478
Keosauqua, IA 52565
Tel: (319) 293-3777/Fax: (319) 293-3776
Website: www.hillphoenix.com

5

#### **LOCATION**

This refrigerated display case has been designed for displaying and storing perishable food product. It is engineered for air-conditioned stores with a maximum ambient of 75°F and 55% relative humidity.

When selecting the location for placement of this case, avoid the following conditions:

#### **Excessive Air Movement**

- Doors
- 2. Air-conditioned vents
- 3. Other air sources

#### **Excessive Heat**

- 1. Windows
- 2. Sun
- 3. Flood lamps 8 feet or less from the product
- 4. Other heat sources

#### **MOVING CASES**

Hillphoenix display cases are generally shipped to stores with casters installed on the base frame. The casters make the job of moving cases easier for everyone involved in the shipping and installation process, as well as reducing the chance of damage from raising and lowering cases with "J" bars to place them on dollies, skates or rollers. In most situations, one or two persons can easily move the case into position.

When the cases arrive at the store, simply roll them on to the store floor to the proper staging area. Occasionally, cases are shipped with longitudinal brace boards attached to help with stabilization. In these instances, the casters should not be removed until the case is in place.

Removing the casters is an easy process. Simply flatten and remove the cotter pins that are holding the casters in place (Fig. 1). Then lift the case with a "J" bar and slide the caster assemblies out. The dismantled casters can now be discarded.

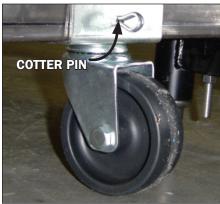


Fig. 1 Cotter pin attaches caster to case

#### **FLOOR PREP**

- Ask the general contractor if your current copy of the building dimensions are the most recently issued. Also, ask for the points of reference from which you should take dimensions to locate the cases.
- 2. Using chalk lines or a laser transit, mark the floor where the cases are to be located for the entire lineup. The lines should coincide with the outside edges of the case feet.
- Move case as close as possible to its permanent location. Remove all crating and shipping braces above the shipping pallet. Loosen the plastic dust cover from the pallet, but leave cover over the case to protect it while removing the case from the pallet.
- 4. Shipping braces with a sled runner construction can either have metal brackets that can be removed with a screw gun, or wood blocks that can be removed with a J-bar. Note: Shipping braces are normally located at each corner of the case. (Shipping braces used vary and are based on case design for best transport.)
- Carefully, if horizontal supports, lift case up and off the pallet. Remove dust cover. Installation hardware ships in a marked packet located inside the case. Installation hardware ships in a marked packet located inside the case.
- 6. Leveling is necessary to ensure proper operation of the refrigeration system and drainage of the condensate. Locate the highest point on the positioning lines as a reference for determining the proper height of the shim-pack levelers. A laser transit is recommended for precision and requires just one person. Level adjustable feet by twisting, if applicable, or shim as necessary under horizontal supports as this will help ensure that the case is not settling over time.
- Locate vertical (bullet leg) support positions along the chalk line (Fig. 2). Spot properly leveled shim packs at each support location.

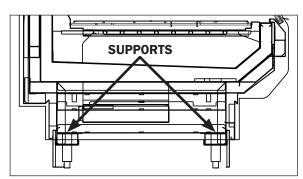


Fig. 2 Vertical supports

8. (CASTERS/BULLET LEGS) If necessary, attach two brackets at two separate corners of the case (Fig. 3) and fasten to the floor with concrete anchors. Note: The brackets do not need to be affixed in the exact locations specified here. However, be sure that the anchors are close to the corners and that at least two brackets are used, one at each corner.

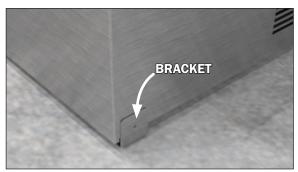


Fig. 3 Seismic anchoring locations (bullet legs)

# A CAUTION

Locate the horizontal or vertical (caster) supports under unit before removing from pallet. Failure to do so will damage the finished metal if correct lift points are not identified prior to removal.

# **A**CAUTION

These cases are not designed for excessive external weight. Do not walk on top or inside of cases. Doing so may result in case damage and/or personal injury.

# **LINE-UP & INSTALLATION**

# **Single Case**

 Move the case into position. Using a "J" bar, raise the end of the case (under cross support), and lower the horizontal support on to the shim packs. Repeat on the other end of the case.

# **A** WARNING

Be certain that your hands and feet are out of the way before lowering the case. Failure to do so may result in serious injury.

- Once the case is properly placed on the shim packs, check the vertical plumb of the case by placing a bubble level on the rear wall. Add/remove shim packs as needed. For the horizontal level, repeat this process after placing the bubble level on the front sill.
- 3. Install the bumper, if applicable, into pre-attached bumper track and snap into place.
- 4. After sufficient time has passed to allow for bumper shrinkage, cut away the excess bumper for final fit and finish. Be certain to use an appropriate cutting tool (tubingor PVC-cutter) to ensure a smooth cut.
- 5. Install case shelves and reconnect lights. Be aware that

- differing shelf configurations will affect energy consumption and case performance.
- 6. Install toekick back onto the base of case.

#### Multi-Case

- Remove any shelves (discard the shelf clips) and/or loose items from the cases that may interfere with case joining. Keep all loose items as they will be used later in the installation process.
- 2. Follow the single-case installation instructions for the first case, excluding #6, then position the next case in the line-up approximately 3' away.
- 3. Move the second case to a position that is approximately 6" from the first case, then position case on the shim packs.
- Push the cases tightly together, then lightly bolt them together through the holes provided (Fig. 4). Tighten all the joining bolts until all margins are equal. Be careful not to over tighten.

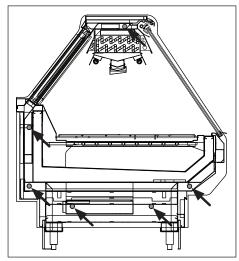


Fig. 4 Bolt locations

- 5. The stub-up location can be found under the tank on the customer left. See technical reference on page 4 for access locations.
- 6. Apply case-to-case watershed (supplied) over the end frame seam (Fig. 5). The watershed prevents water from settling in the case joint.
- 7. Repeat steps 3-6 of this sequence for all remaining cases. Be certain to properly level all cases.
- 8. Properly align the front panels as needed, then install, if applicable, front panel trim (supplied).
- 9. Install the bumper into pre-attached bumper track and snap into place.
- 10. After sufficient time has passed to allow for bumper shrinkage, cut away the excess bumper for final fit and finish. Be certain to use an appropriate cutting tool (tubing-

# **CASE INSTALLATION**

or PVC-cutter) to ensure a smooth cut.

- 11. Install case shelves and reconnect lights. Be aware that differing shelf configurations will affect energy consumption and case performance.
- 12. Install toekick back onto the base of case.

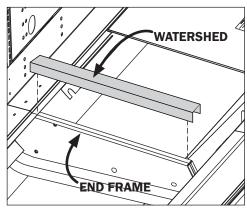


Fig. 5 Sealing the pipe chase

# A CAUTION

Installation of 3rd-party materials may result in diminished case performance.

#### REFRIGERATION

Refrigeration connections will be made through the refrigeration stub up location on the customer left side of the case. Refrigeration lines may be headed together for all cases in a line-up, if necessary, by lines through the access holes with a high grade silicon to prevent recirculation. All lines must be correctly sized. See technical reference on page 4 for access locations.

If it becomes necessary to penetrate the case bottom for any reason, make certain it is sealed afterward with canned-foam sealant and white RTV.

# A CAUTION

Be certain that all piping connections are compliant with local codes.

# A CAUTION

If any brazing is necessary, place wet rags around the area to avoid tank damage.

#### **PLUMBING**

The drain outlet or "P" trap (Fig. 6) is shipped loose with the case and made from a  $1\,1/2$ " PVC pipe. Care should be given to ensure that all connections are water-tight and sealed with the appropriate PVC or ABS cement.

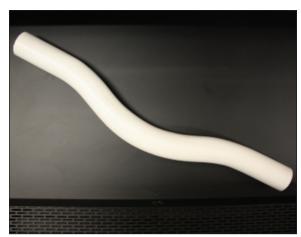


Fig. 6 "P" trap / drain outlet

Drain lines can be run left or right of the tee with the proper pitch to satisfy local drainage requirements. When connecting the PVC to the existing floor drains be sure to provide as much downhill slope as possible and avoid long runs of drain lines.

Do not install condensate drains in contact with non-insulated suction lines in order to prevent condensate from freezing. Install the 1 1/2" PVC trap, which is provided with the case. All drains must be trapped.

Before operating the case, be certain to remove the styrofoam shipping block that protects the plumbing lines during shipping.

# A CAUTION

Be certain that all plumbing connections are compliant with local codes.

# A CAUTION

Be sure to remove all styrofoam shipping blocks from piping and refrigerant lines. Failure to do so may result in case damage.

#### **ELECTRICAL**

Electrical hookups are made through the power supply box that can be accessed by removing the rear panel.

For case-to-case wiring, run conduit between the power supply boxes or run wiring through the raceway. When connecting to the power supply on the case, field wiring should exit box from the side furthest away from case wiring to allow more room inside for wiring connections. Always check the data tag located on left end exterior panel or top interior of the case. The case must be grounded. For more detailed electrical wiring information (see Appendix A1).

# A CAUTION

Be certain that all electrical connections are compliant with local codes.

# A DANGER

**CAUTION, RISK OF ELECTRIC SHOCK.** If the cord or plug becomes damaged, replace only with a cord and plug of the same type.

#### **GENERAL LIGHTING INFORMATION**

Hillphoenix cases are equipped with LED luminaires and feature specially designed light reflectors in the cornice to improve the illumination of products. LED power supplies operate both the cornice and shelf lights and are located above the cornice reflectors.

The lighting system has an ON/OFF switch located in the raceway, power box or at the inside back of the case. Once a case has been properly positioned in the store and an electrician has connected the lighting circuit, the lights may be turned on to verify that they are connected and functioning properly.

To ensure peak performance, it is advisable to run the lighting systems only when the store climate control is on and case refrigeration is started. **Note: It is highly recommended that the ambient store temperature not exceed 80°F.** 

# A DANGER

#### **SHOCK HAZARD**

Always disconnect power to case when cleaning, servicing or configuring components of the lighting system. Failure to do so may result in serious injury or death.

# **A** WARNING

Using improper DC power supplies may damage the luminaires, resulting in sub-standard operation and increased chances of safety issues/ injury.

# **A** WARNING

Never replace a 24V DC power supply with a T8 or T5 ballast of any kind! Ballasts use alternating current (AC) instead of direct current (DC) and operate at a much higher voltage than is used by this LED system. Doing so will damage the LED system and increases the chance of safety issues/injury.

# LED DRIVER/POWER SUPPLY BOX

To gain access to the LED driver or power supplies remove the rear panel (Fig. 7). The power supply can be located at the customer left side of the case.

#### **REPLACING LED LIGHTS**

Once store power is connected and the light circuit is energized, the Clearvoyant LED system should operate without the

need for any significant maintenance for several years. Should a power supply need to be removed and/or replaced, turn off the power to the case before proceeding. Be certain to replace the power supply with genuine Hillphoenix parts or a comparable UL-listed Class-2 rated regulated 24V DC power supply with 100W output capacity.

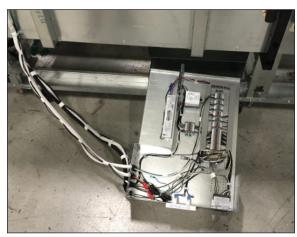


Fig. 7 LED driver / power supply box

#### **LED LUMINAIRES**

## **Removing LED luminaires:**

- 1. Unplug the luminaire.
- Remove the screws from the light clamps (Fig. 8) while keeping ahold of the light. Once the screws are removed the light rod will come away from the case with the clamps still holding to the light.

# A CAUTION

Too much tension on the inner clamp rings while removing them from an LED light rod may cause breakage. Use only enough tension for removal.

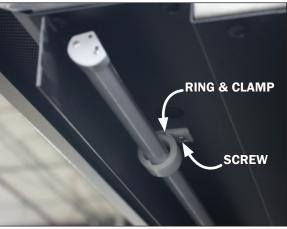


Fig. 8 LED light & ring / clamp

3. Remove the closed clamps and inner rings (Fig. 8) by un-

clipping the clamp ends located above the screw opening. This will release the grip around the inner ring (Fig. 9) and allow for the two pieces to be separated from one another.

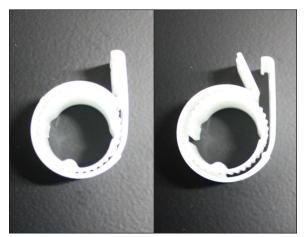


Fig. 9 Closed clamp

Fig. 10 Open clamp

4. Carefully remove the inner rings from around the light rod.

# **Re-installing LED luminaires:**

- Place a ring (Fig. 11) around each end of the light rod and rotate until both edges of the rod line-up and snap ahold to the ridges in the ring.
- 2. Slide a clamp (Fig. 11) over each ring and close them tight around the rings by clipping together the clamp ends located above the screw opening.



Fig. 11 LED ring and clamp

- 3. Line-up the closed clamps (Fig. 8) and light rod with the existing screw holes on the case and re-attach.
- 4. Rotate the light rod into desired position after the clamps are firmly re-attached.

# PRE-POWER CHECKLIST

been	re powering-up the case, be certain that all of the steps listed below have completed to ensure proper case functionality, safety and compliance with anty terms.
	Have you thoroughly examined the case for shipping damage? (see pg. 5)
	Have you checked the vertical plumb of the case? The horizontal level? (see pg. 6)
	Have you applied the sealant to the end breakers of adjoining cases? (see pg. 7)
	Have you sealed the case-to-case joints by applying caulk and acrylic tape to the end frame seam? (see pg. 7)
	Have you installed the toekick? (see pg. 8)
	Have you removed the shipping blocks from the refrigeration and plumbing lines? (see pg. 9)
been	powering-up the case, be certain that all of the steps listed below have completed to ensure proper case functionality, safety and compliance with anty terms.
1.	Check all lights to ensure they are all functioning properly.
2.	Check case temperature and adjust controller as needed.

#### **AIRFLOW & PRODUCT LOAD**

Hillphoenix cases provide maximum product capacity within the refrigerated air envelope. Please keep products within the appropriate load limit.

It is important that you do not overload the food product display so that it impinges on the airflow pattern (Fig. 12). Overloading will cause malfunction and the loss of proper temperature levels.

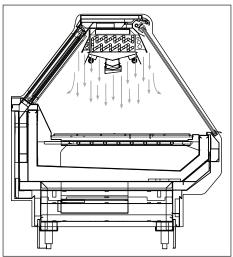


Fig. 12 Airflow pattern

# 🛕 WARNING

Always keep product within the designated air curtain. Failure to do so may result in case malfunction and product losing proper temperature, resulting in sub-standard operation and increased chances of food contamination.

#### **DEFROST & TEMPERATURE CONTROLS**

Cases are equipped with either Electric, Hot Gas or Timed-Off defrost at the owner's option.

The hot gas defrost termination sensor bulb and probe are attached to the dump line which is in the front, left-hand side of the case.

### **DETERMINING SUPERHEAT**

To identify proper superheat settings, complete the following:

- Obtain suction pressure from access port; obtain suction line temperature from area near TXV bulb at the outlet of evaporator coil.
- 2. Using the suction pressure reading, convert pressure to

- temperature using temperature pressure chart (see *Appendix B1*).
- 3. Finally, subtract the converted temperature reading from the actual temperature reading for superheat setting.

#### **CASE CLEANING**

A periodic cleaning schedule should be established to maintain proper sanitation, insure maximum operating efficiency, and avoid the corrosive action of food fluids on metal parts that are left on for long periods of time. We recommend cleaning once a week. Further suggestions for case cleaning include the following:

- To avoid shock hazard, be sure all electrical power is turned off before cleaning. In some installations, more than one disconnect switch may have to be turned off to completely de-energize the case.
- All surfaces pitch downward to a deep-drawn drain trough, funneling liquids to the center of the case where the waste outlet is located for easy access. Check the waste outlet to insure it is not clogged before starting the cleaning process and avoid introducing water faster than the case drain can carry it away.
- To clean the LED luminaires, shut off the lights in the case, then wipe the luminaires down with a soft, damp cloth. Avoid using harsh or abrasive cleaners as they may damage the lights. Be certain that the luminaires are completely dry before re-energizing.
- Clean from top to bottom when cleaning the display case to avoid cross contamination.
- If any potentially harmful cleaners are used, be certain to provide a temporary separator (e.g., cardboard, plastic wrap, etc.) between those cases that are being cleaned and those that may still contain product.
- Avoid spraying any cleaning liquids directly on the electrical connections.
- Allow cases to be turned off long enough to clean any frost or ice from coil and pans.
- Remove toekick and clean underneath the case with a broom and a long-handled mop. Use warm water and a disinfecting cleaning solution when cleaning underneath the cases.

# A DANGER

# **SHOCK HAZARD**

Always disconnect power to case when servicing or cleaning. Failure to do so may result in serious injury or death.

#### **Rear Load Doors**

- Remove the rear sliding doors on the back of the case and clean. To remove: push up and pull out (Fig. 13).
- Use a spray bottle filled with an approved mild detergent and warm water.

- 3. Use a clean, disposable cloth (approved item) to thoroughly clean all areas of the case.
- 4. Wipe down doors with a clean, disposable cloth (approved item)
- 5. Place the cleaned doors on a clean sanitized surface until they are dry.



Fig. 13 Rear load door removal



# THIS DOCUMENT CONTAINS IMPORTANT INFORMATION ABOUT CLEANING YOUR ULTRAVISION® ANTI-REFLECTIVE GLASS! PLEASE READ AND FOLLOW THESE INSTRUCTIONS TO PREVENT DAMAGE TO THE ANTI-REFLECTIVE COATINGS.

SOVIS ULTRAVISION® tempered glass specialized Anti-Reflective coatings on each surface of the glass. These coatings reduce the glare from lighting so that the products on display are more visible to your customers.

While the Anti-Reflective coatings are durable, they are susceptible to scratching if abrasive materials are used for cleaning. Once the glass surfaces are scratched, it is impossible to restore the original finish. Special care must be taken to prevent damage when cleaning the glass. SOVIS recommends the following products for routine cleaning of ULTRAVISION® Anti-Reflective glass:

Cleaning Cloths – two products are recommended...

- Scotch-Brite<sup>®</sup> High Performance Cloth manufactured by 3M<sup>®</sup> and available in most grocery stores under the name Scotch-Brite<sup>®</sup> Microfiber Cleaning Cloth in a 12" x 14" size. This cloth is washable and may be reused as long as it remains clean.
- **Spontex**<sup>®</sup> **Microfibre Cleaning Cloth** distributed by Spontex<sup>®</sup> and available in most grocery stores under the same name in a 15.75" x 12" size. This cloth is washable and may be reused as long as it remains clean.

Cleaning Fluid – for more difficult cleaning jobs, these products are recommended...

- Windex® standard product only (extra-strength or specialty products may not be suitable)
- Glass-Plus® standard product only (extra-strength or specialty products may not be suitable)
- Exceed® Multi-Surface & Glass Cleaner from Kay Chemical Company, Greensboro, NC
- Warm Water

Note: equivalent store-brand glass cleaning products are normally acceptable substitutes to the brand name products listed above.

The cleaning cloths named above will normally remove dust, grease, oil, and fingerprints without the need for cleaning fluids. A light spray of the cleaning fluids listed above will reduce the time required for cleaning. These materials have been tested and proven to clean ULTRAVISION® glass without scratching or damaging the Anti-Reflective coatings. If you need assistance with obtaining these materials, please contact your display case supplier.

Under no circumstances should the following types of materials be used for cleaning glass with ULTRAVISION® Anti-Reflective coatings.

- Coarse Paper Towels
- Scouring Pads or Powders
- Steel Wool or Steel Fiber Materials
- Blades
- Acidic or highly Alkaline detergents
- Fluorine based detergents

A CAUTION
Do not use these materials for cleaning glass.
•



# **Contact the Service Parts Department at:**

# 319-293-3777

Provide the following information about the part you are ordering:

- Model number and serial number\* of the case for which the part is intended.
- Length of the part (if applicable).
- Color of part (if painted) or color of polymer part.
- · Whether part is for left or right-hand application.
- Quantity

\*Data tag is located on the left end exterior panel or top interior of the case.

If the parts are to be returned for credit, contact the Parts Department. Do not send parts without authorization.

# APPENDIX

A1	Wiring Information
B1	Sporlan Pressure-Temperature Chart
C1	Parts List

# **A1: WIRING DIAGRAM**




# **B1: SPORLAN PRESSURE-TEMPERATURE CHART**

nds Per Gauge	)E)	'44 - CO <sub>2</sub>	569.3	577.6	586.0	594.5	603.1	611.7	620.5	629.3	638.3	684.4	733.1	784.2	838.1	894.9	954.9	1018	*	*	*	*	*	*	*	*	*	*	*	*	*	*
Pressure-Pounds Per Square Inch Gauge	AN COL	717 (A) 744 - CO <sub>2</sub>		63.1	64.7		67.9			72.8								151.8	166.1	181.2	197.3	214.4	232.5	251.6	271.9	293.3	315.8	339.6	364.7	391.0	418.7	447.8
Pressi Squ	REFRIGERANT (SPORLAN CODE)	507 (P)	97.8	94.6	96.5	98.3	100.2	102.1	104.1	106.0	108.0	118.3	129.2	140.7	153.0	165.9	179.6	194.1	209.3	225.4			278.8			340.9		387.8	413.0	439.5	467.4	497.0
	IGERAN <sup>-</sup>		88.8	9.06	92.4	94.2	0.96	6.76	8.66	101.7	103.6	115.3	126.0	137.3						220.2							355.6		403.7	429.6	456.8	485.5
	REFR	34a (J) 404A (S)	37.0	38.0	39.0	40.1	41.1	42.2	43.2	44.3	_		57.4					95.2	104.3			135.0	146.4		171.2	184.6		213.6	229.2	245.7	262.9	281.0
	TURE	(°C)	9.5	6.1	6.7	7.2	7.8	8.3	8.9	9.4	10.0	12.8	15.6	18.3	21.1	23.9	26.7	29.4		35.0			43.3			51.7		57.2	0.09		65.6	68.3
level	<b>TEMPERATURE</b>	(°F)	42	43	4	45	46	47	48	49	20	22	09	65	20	75	80	85	06	92	100	105	110	115	120	125	130	135	140	145	150	155
at sea leve	E)	44 - CO <sub>2</sub>	357.4	363.4	369.5	375.6	381.8	388.0	394.3	400.7	407.2	413.8	420.4	427.1	433.8	440.7	447.6	454.6	461.7	468.8	476.1	483.4	490.8	498.3	505.8	513.4	521.2	529.0	536.9	544.8	552.9	561.0
- 1	REFRIGERANT (SPORLAN CODE)	717 (A) 744 - CO <sub>2</sub>																		43.8							52.9			_	58.6	60.1
CHA	T (SPORI	507 (P)	48.1	49.3	50.5	51.8	53.0	54.3	55.6	56.9	58.3	9.69	61.0	62.4	63.8	65.3	2.99	68.2	69.7	71.2	72.7	74.3	75.9	77.5	79.1	80.7	82.4	84.1	82.8	87.5	89.2	91.0
SURE	IGERAN	404A (S)	45.4	46.6	47.8	49.0	50.2	51.5	52.7	54.0	55.3	9.95	58.0	59.3	60.7	62.1	63.5	64.9	66.4	8.79	69.3	70.8	72.4	73.9	75.5	77.1	78.7	80.3	82.0	83.7	85.4	87.1
PRES	REFR	134a (J)	13.1	13.8	14.4	15.0	15.7	16.4	17.0	17.7	18.4	19.1	19.9	20.6	21.3	22.1	22.9	23.7	24.5	25.3	26.1	56.9	27.8	28.6	29.5	30.4	31.3	32.2	33.1	34.1	35.0	36.0
URE	ATURE	(°C)	-11.1	-10.6	-10.0	-9.4	-8.9	-8.3	-7.8	-7.2	-6.7	-6.1	-5.6	-5.0	-4.4	-3.9	-3.3	-2.8	-2.2	-1.7	-1.1	9.0-	0.0	9.0	Ξ:	1.7	2.2	2.8	3.3	3.9	4.4	5.0
PERATURE PRESSURE CHART	<b>TEMPERATURE</b>	(°F)	12	13	14	15	16	17	18	19	70	21	22	23	24	25	56	27	28	59	30	31	32	33	34	35	36	37	38	39	40	41
TEMP	E)	44 - CO <sub>2</sub>	79.9	91.1	103.4	116.6	131.0	146.5	163.1	181.0	2007	208.3	216.5	225.0	233.8	242.7	251.9	261.3	271.0	280.9	291.0	296.2	301.5	306.8	312.1	317.6	323.1	328.6	334.2	339.9	345.7	351.5
<b>3</b> _	AN COL	717 (A) 744 - CO	18.6	16.6	14.3	11.7	8.8	5.4	1.6	1.3										14.3				18.0				21.2		_		$\dashv$
SPORI	T (SPORI	507 (P)	2.8	2.2	6.0	3.0	5.4	8.1	11.0	14.1	17.6	19.1	20.6	22.2	23.8	25.5	27.3	29.1	30.9	32.8	34.8	35.8	36.9	37.9	39.0	40.1	41.1	45.3	43.4	44.5	45.7	46.9
cury	REFRIGERANT (SPORLAN CODE)		7.3	3.9	0.1	2.0	4.3	8.9	9.6	12.7	16.0	17.4	18.9	20.4	22.0	23.6	25.3	27.0	28.8	30.7	32.6	33.6	34.6	35.6	36.6	37.7	38.7	39.8	40.9	45.0	43.1	44.3
Vacuum-Inches of Mercury Bold Italic Figures	REFR	134a (J) 404A (S)	21.8	20.3	18.7	16.9	14.8	12.5	9.8	6.9	3.7	2.3	0.8	0.4		1.9	2.8	3.6	4.6	5.5	6.5	7.0	7.5	8.0	8.5	9.1	9.6	10.2	10.8	11.3	11.9	12.5
Vacuum-Inches o Bold Italic Figures	ATURE	(°C)	-51.1	-48.3	-45.6	-42.8	-40.0	-37.2	-34.4	-31.7	-28.9	-27.8	-26.7	-25.6	-24.4	-23.3	-22.2	-21.1	-20.0	-18.9	-17.8	-17.2	-16.7	-16.1	-15.6	-15.0	-14.4	-13.9	-13.3	-12.8	-12.2	-11.7
Vacuur Bold Ita	<b>TEMPERATURE</b>	(°F)	09-	-55	-50	-45	-40	-35	-30	-25	-20	-18	-16	-14	-12	-10	φ	φ	4	-5	0	-	7	m	4	2	9	7	∞	6	10	11

To determine subcooling for R-404A use BUBBLE POINT values (Temperatures above 50°F — Gray Background); to determine superheat for R-404A, use DEW POINT values (Temperatures 50°F and below).

\*\* = exceeds critical temperature

# C1: PARTS LIST

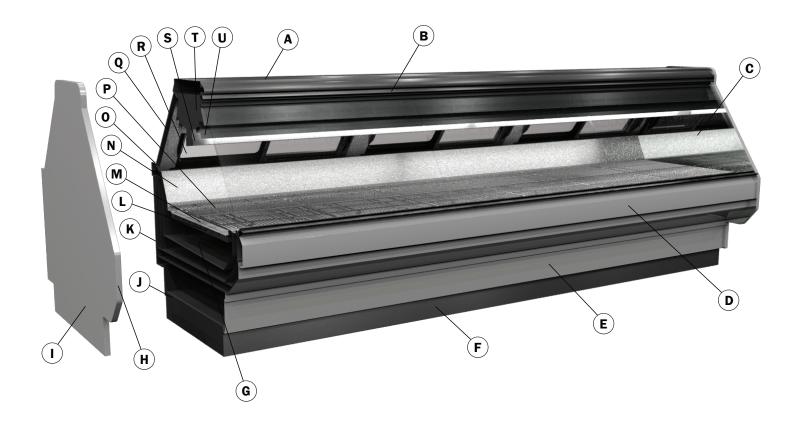

- A Case Top
- **B** Lift Glass Hardware
- C Front Lift Glass
- D Die Board
- E Front Panel
- F Front Toekick
- **G** Insulated Drain Pan
- H End Panel Trim
- I End Panel
- J End Toekick
- K Outside Back
- L Serpentine Coil
- M Bottom Deck
- N Inside Back
- O Rear Sill
- P Telescoping Wire Rack
- Q Strut
- R Sliding Rear Load Doors
- S Drain Trough
- T Gravity Coil
- U Light Guard



# Hill PHOENIX, Inc. Hereinafter Referred To As Manufacturer

# LIMITED WARRANTY

#### **GENERAL WARRANTY**

Manufacturer's products are warranted to be free from defects in materials and workmanship under normal use and maintenance for fourteen months from date of shipment from manufacturer (the "Base Warranty Period"). In the event of a qualifying warranty claim, a new or rebuilt part to replace any defective part will be provided without charge. The replacement part is covered under this warranty for the remainder of the applicable Base Warranty Period. In order to be eligible for warranty coverage, customer must: (i) notify Manufacturer promptly upon discovery of a warrant defect, and (ii) comply with the warranty claim procedures provided by Manufacturer from time to time.

This equipment warranty does not include labor or other costs incurred for diagnosing, repairing, removing, installing, shipping, servicing, or handling of either defective parts or replacement parts.

#### The warranty shall not apply:

- To any unit or any part thereof which has been subject to accident, alteration, negligence, misuse or abuse, or which has not been
  operated in accordance with the manufacturer's recommendations, or in conditions outside of Manufacturer's specifications, or if the
  serial number of the unit has been altered, defaced, or removed.
- 2. When the unit, or any part thereof, is damaged by fire, flood, or other act of God.
- 3. To products that are impaired or damaged due to improper installation.
- 4. When installation and startup forms are not properly completed or returned within two weeks after startup.
- 5. If the defective part is not returned to the Manufacturer.
- 6. To service, maintenance or wear and tear parts (such as lights, starters and ballasts)

#### MODIFICATIONS TO GENERAL WARRANTY

The following sets forth certain modifications to the General Warranty for specific products of Manufacturer:

# DISPLAY CASE AND SPECIALTY PRODUCTS CLEARVOYANT® LED LIGHTING

The warranty period for Clearvoyant LED lighting components within the Clearvoyant lighting system is five years from date of shipment.

# REMEDY LIMITATION/DAMAGES EXCLUSION

THE REMEDY OF REPAIR OR PROVISION OF A REPLACEMENT PART WITHOUT CHARGE SHALL BE THE EXCLUSIVE REMEDY FOR ANY WARRANTY CLAIM HEREUNDER. WITHOUT LIMITING THE FOREGOING, MANUFACTURER SHALL NOT BE LIABLE UNDER ANY CIRCUMSTANCES FOR INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES, INCLUDING LOSS OF PROFIT, LABOR COST. LOSS OF REFRIGERANT OR FOOD PRODUCTS.

#### **EXCLUSIVE WARRANTY**

THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY WITH RESPECT TO THE PRODUCTS. ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED AND EXCLUDED. NO IMPLIED WARRANTY SHALL BE DEEMED CREATED BY COURSE OF DEALING OR USAGE OF TRADE. NO OTHER PERSON IS AUTHORIZED TO EXPAND OR CREATE ANY OBLIGATION GREATER THAN OR MORE EXPANSIVE THAN THE WARRANTY PROVIDED HEREIN.

Submit warranty claims to:

Hillphoenix Refrigeration & Power Systems Division

2016 Gees Mill Road Conyers, GA 30013 Warranty / Service

Phone: 1-833-280-5714

**Hillphoenix Display Case Division** 

1925 Ruffin Mill Road Colonial Heights, VA 23834 Warranty / Service

Phone: 1-833-280-5714

**Hillphoenix Specialty Products Division** 

703 Franklin Street Keosauqua, IA 52565 Warranty / Service Phone: 1-833-280-5714

# Warning Maintenance & Case Care

When cleaning cases the following must be performed PRIOR to cleaning:

To avoid electrical shock, be sure all electric power is turned off before cleaning. In some installations, more than one switch may have to be turned off to completely de-energize the case.

Do not spray cleaning solution or water directly on fan motors or any electrical connections.

All lighting receptacles must be dried off prior to insertion and re-energizing the lighting circuit.

Please refer to the Use and Maintenance section of this installation manual.



Tel: 319-293-3777

703 Franklin Street, PO Box 478, Keosauqua, IA 52565

Due to our commitment to continuous improvement, all specifications are subject to change without notice.

Hillphoenix is a Sustaining Member of the American Society of Quality.

Visit our website at www.hillphoenix.com

